 
 
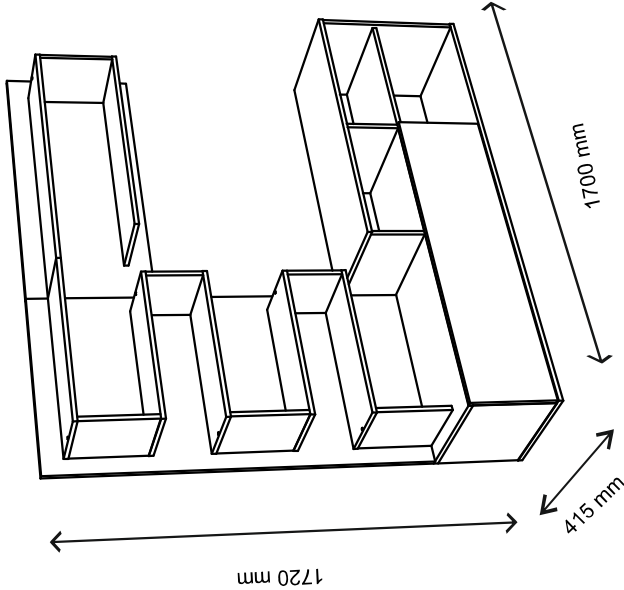 
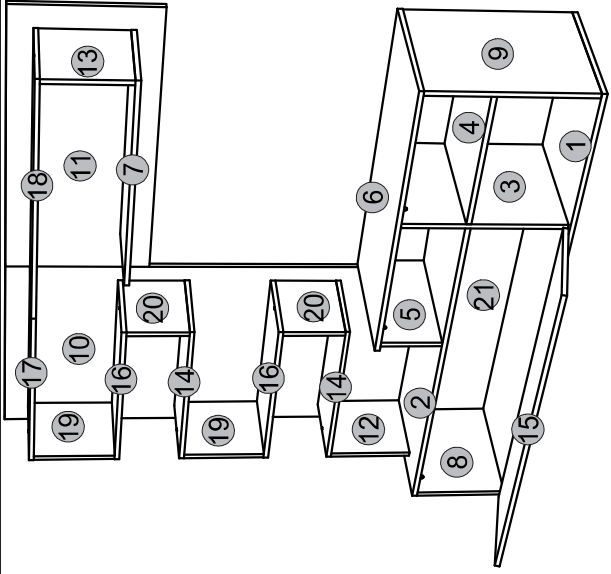 
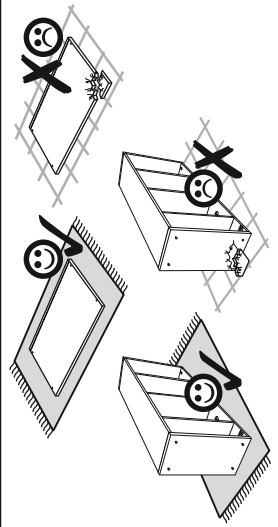 
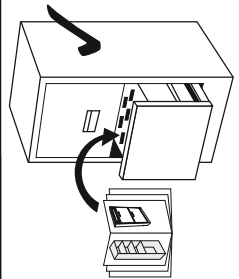 
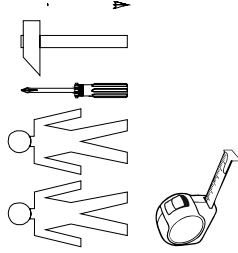 
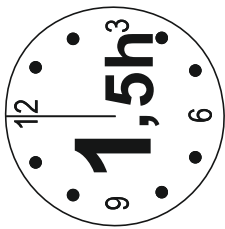 
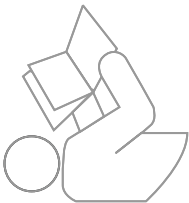 






Instalation manual

Jasmin




Element symbol	Dimensions	Code	Package
1	1700 415	16	1 J-201 1/3
2	1184 397	16	1 J-202 1/3
3	518 397	16	1 J-107 1/3
4	483 396	16	1 J-306 1/3
5	202 397	16	1 J-111 1/3
6	1004 415	16	1 J-203 1/3
7	780 250	16	1 J-305 1/3
8	300 397	16	1 J-109 1/3
9	518 413	16	1 J-108 1/3
10	1368 696	16	1 J-106 2/3
11	463 1004	16	1 J-101 2/3
12	270 250	16	1 J-110 2/3
13	270 250	16	1 J-103 2/3
14	578 250	16	2 J-302 2/3
15	312 1197	16	1 J-001 2/3
16	578 250	16	2 J-307 2/3
17	636 250	16	1 J-301 2/3
18	921 250	16	1 J-304 2/3
19	270 250	16	2 J-102 2/3
20	200 250	16	2 J-104 2/3
21	326 1193	3	1 J-601 2/3

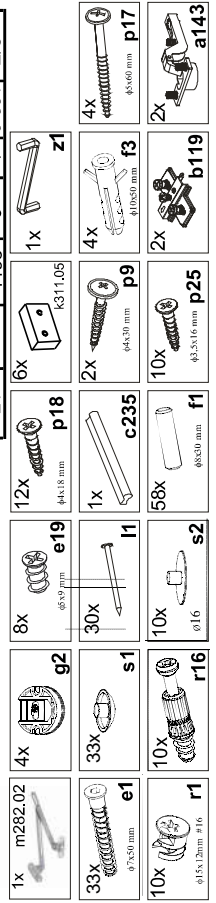


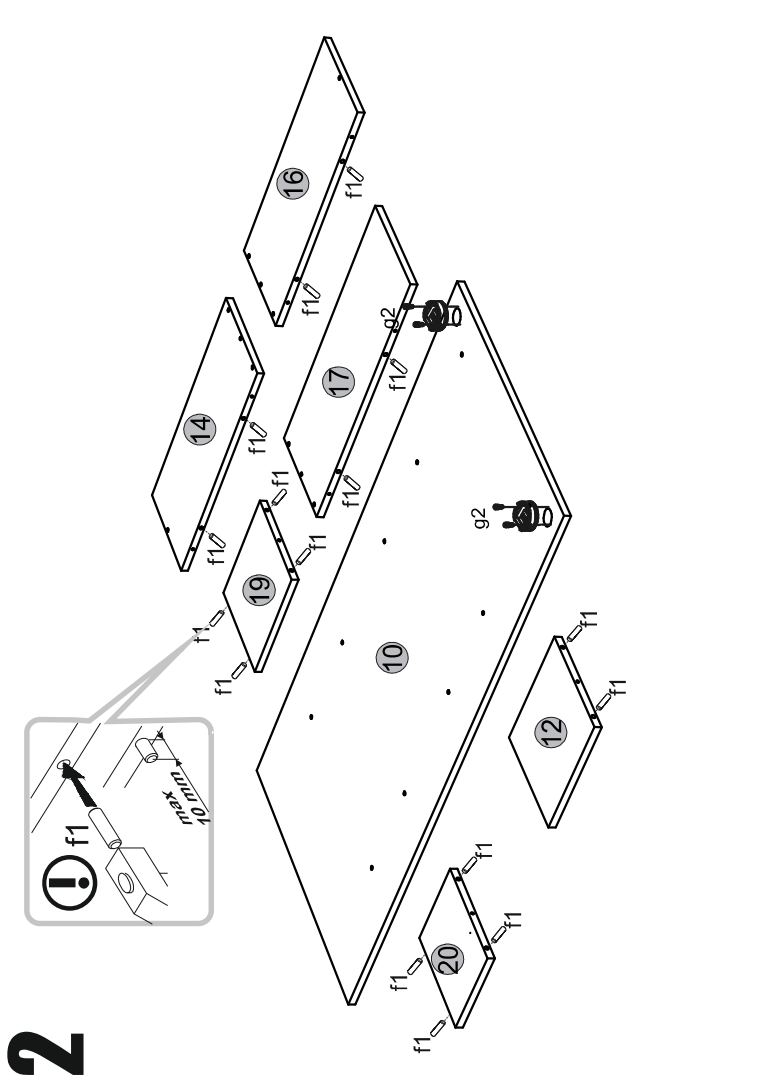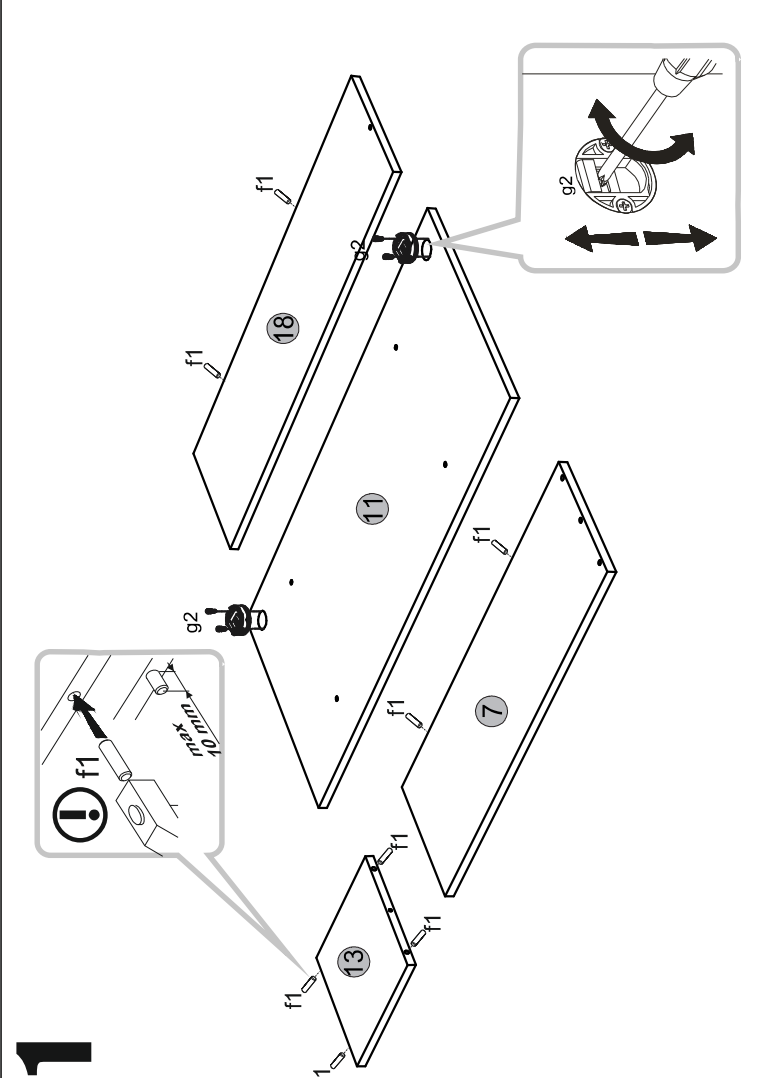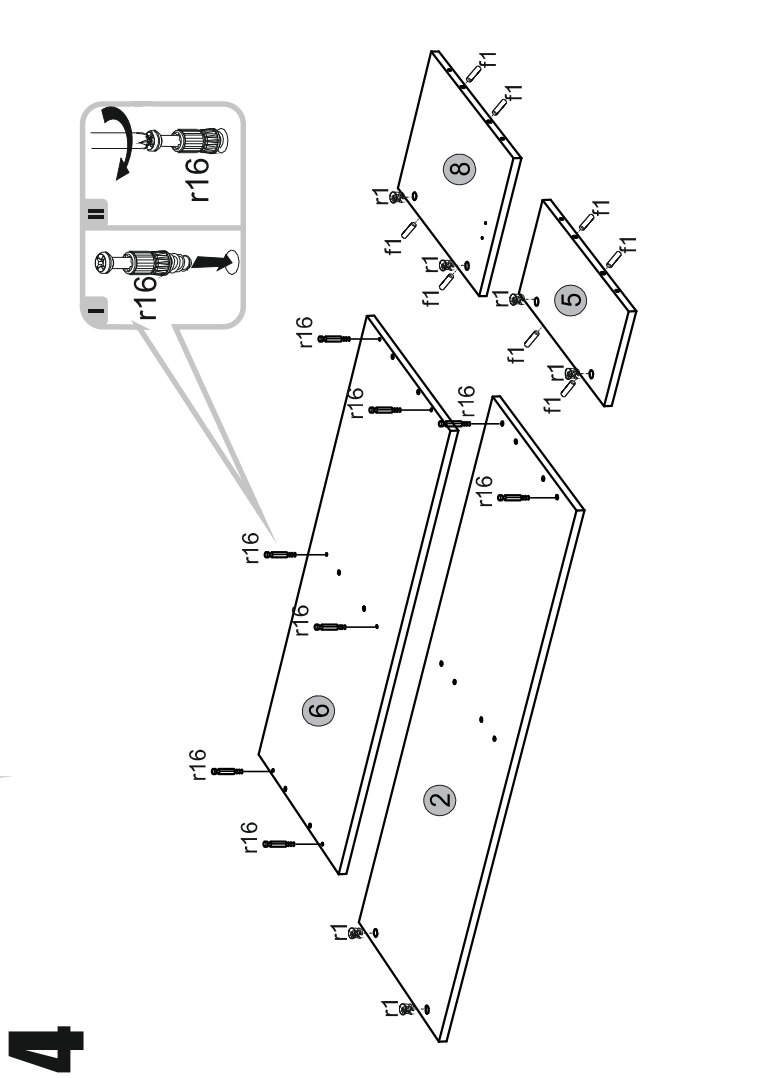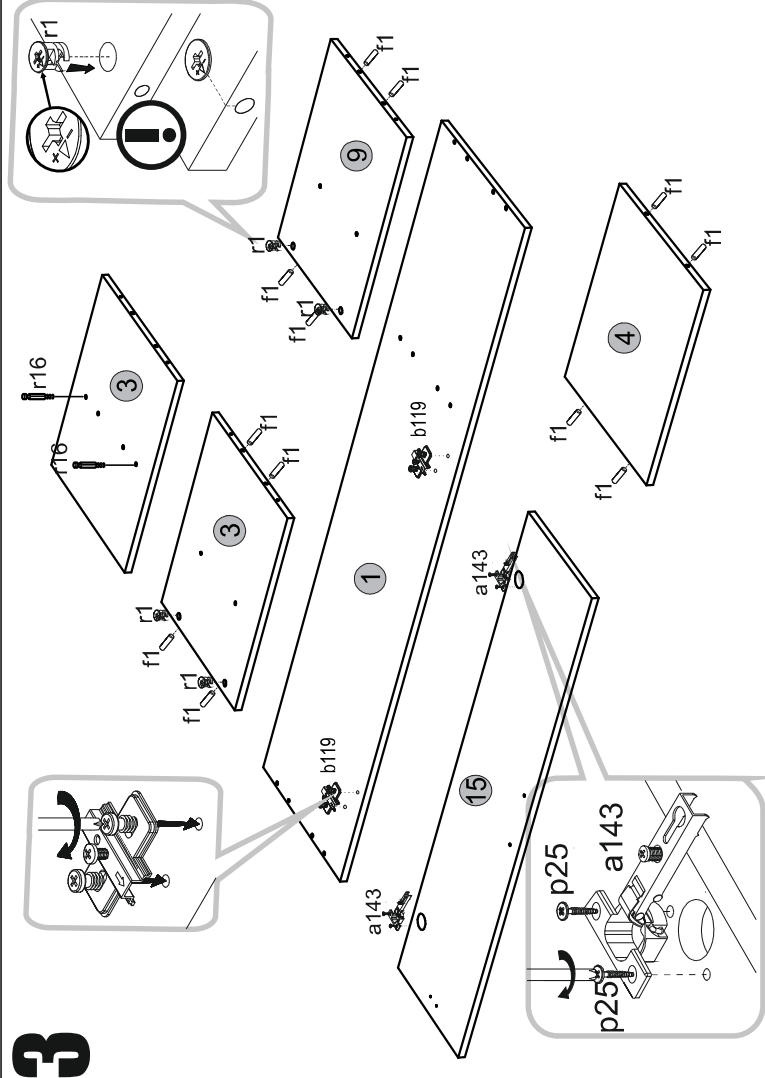    


5

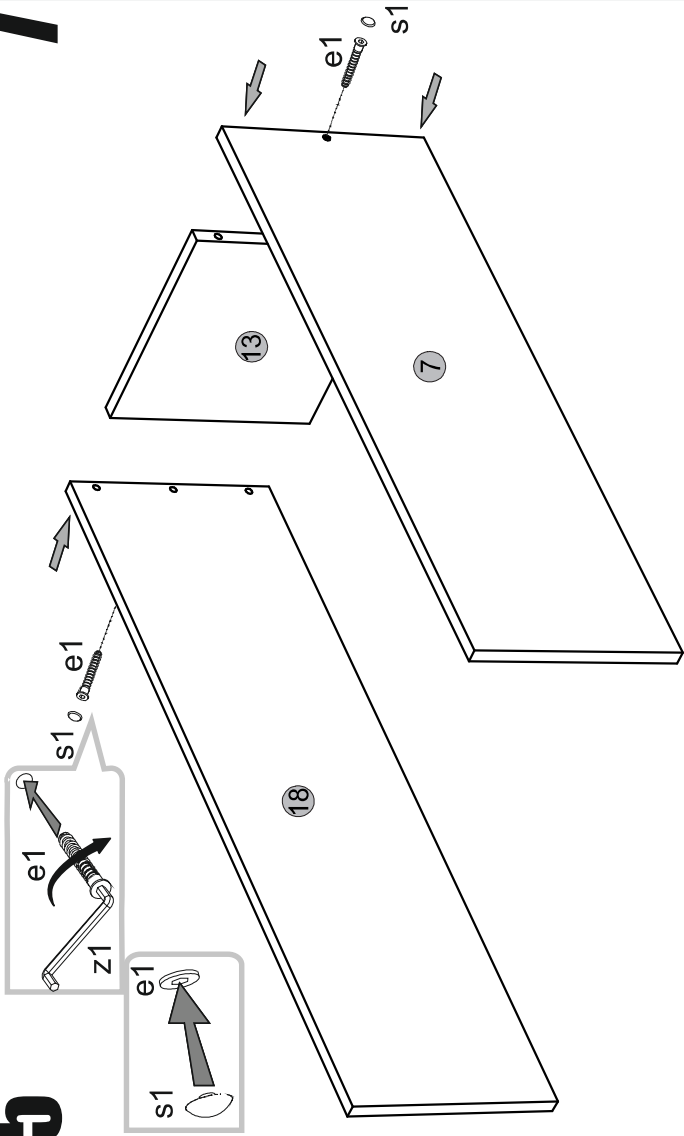 



7




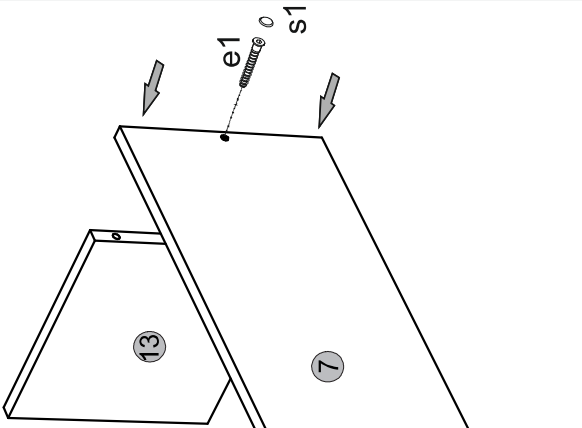 


6

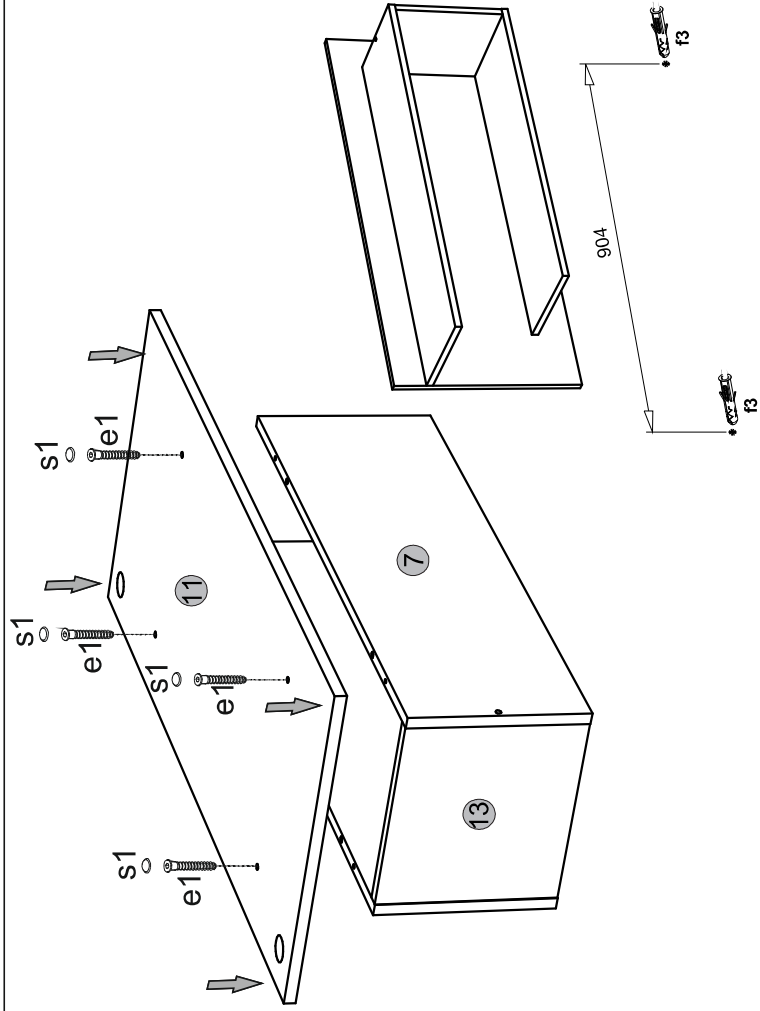 


8

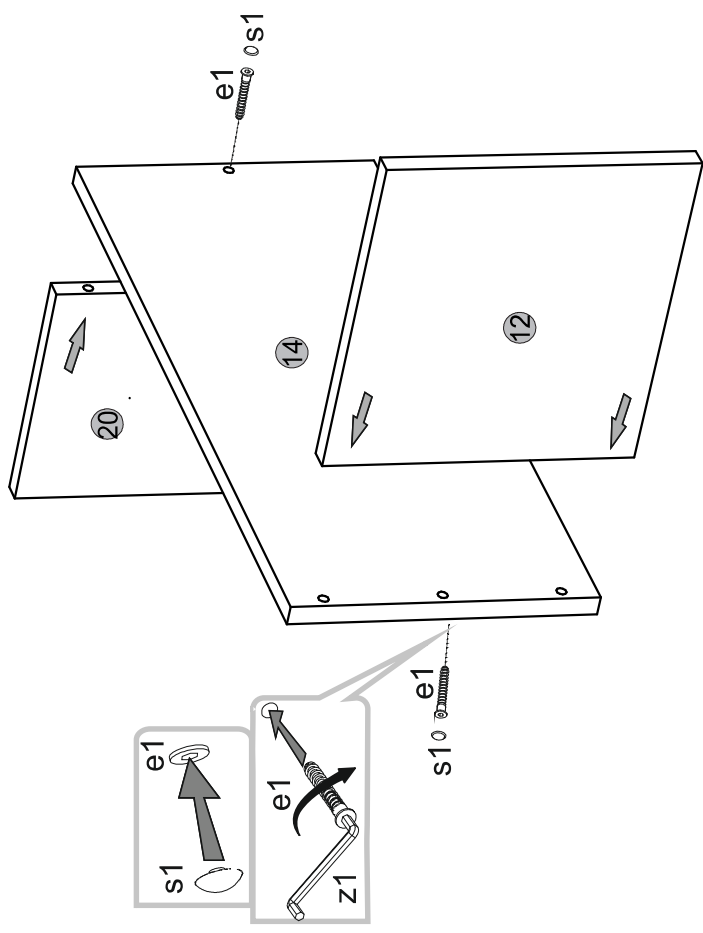 
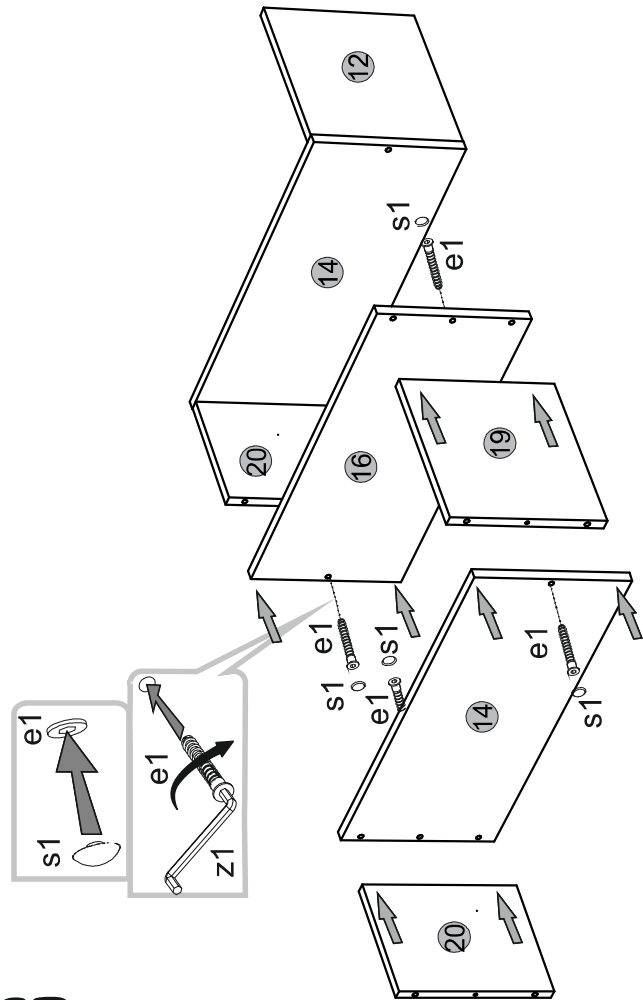 


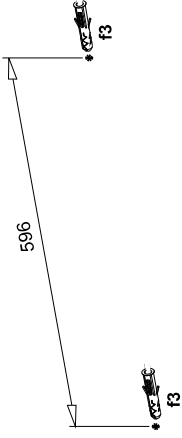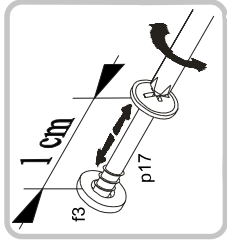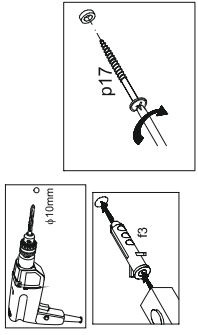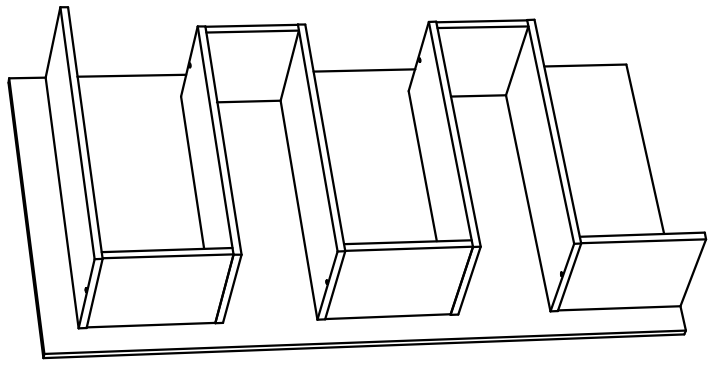    


11

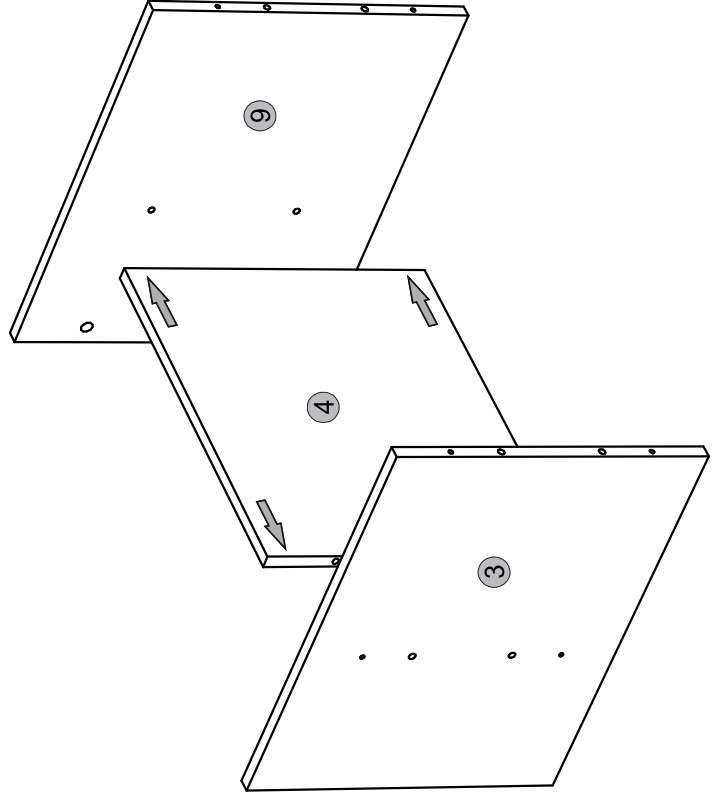 

12

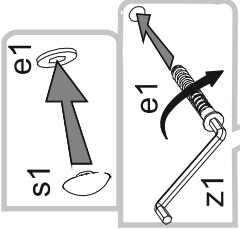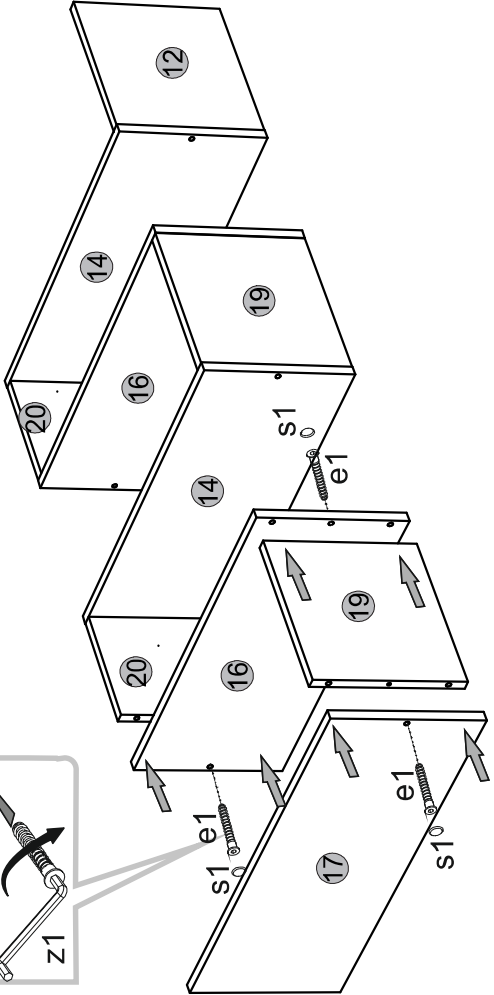  


9

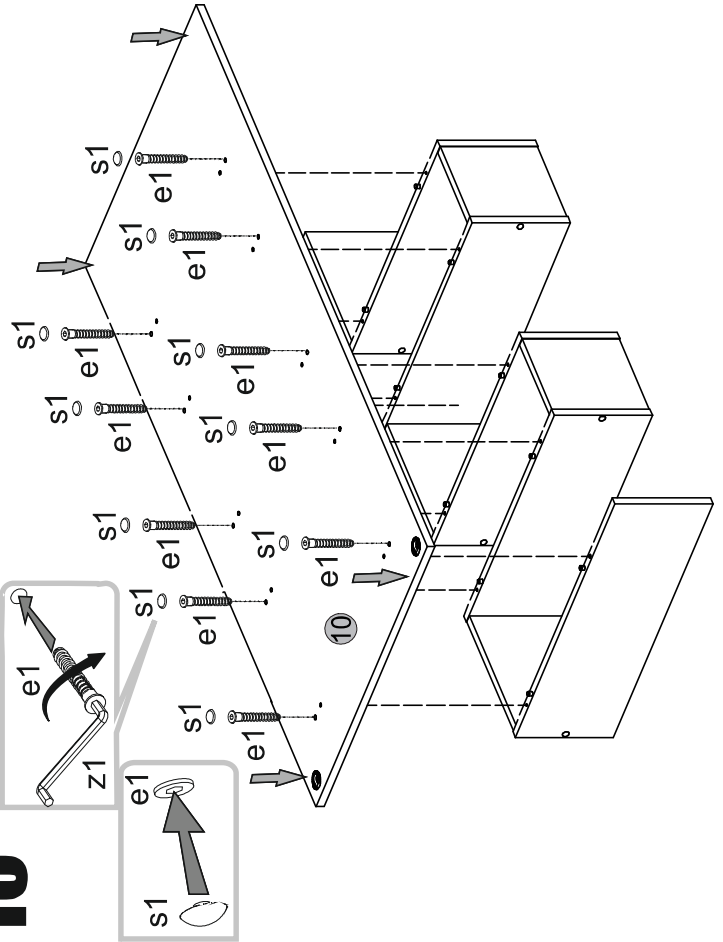 


10

 
15

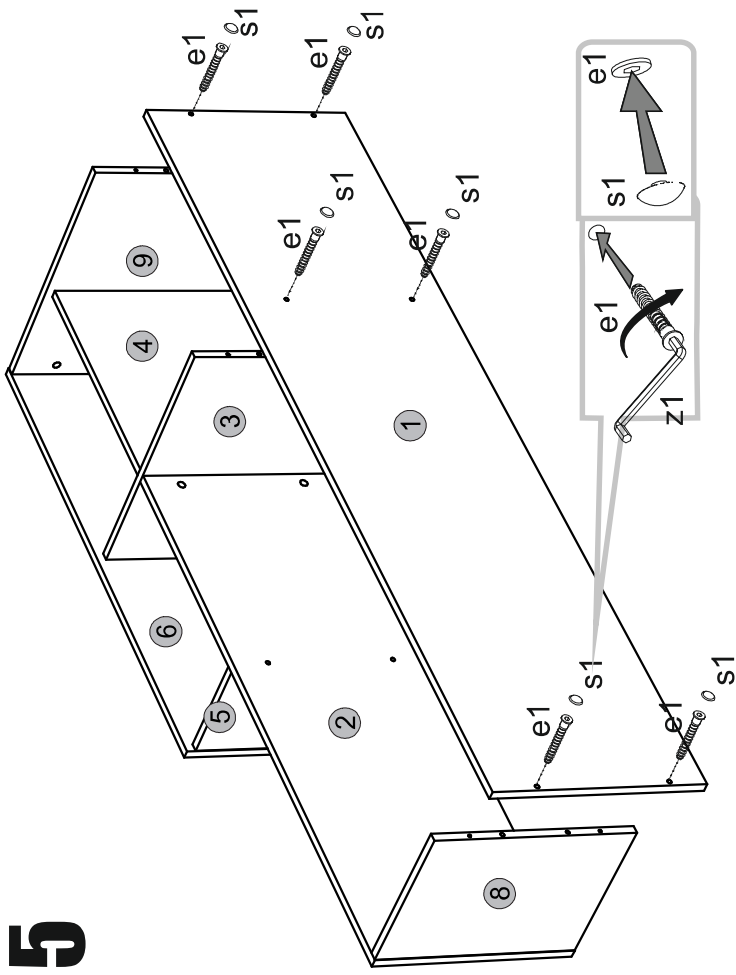

16

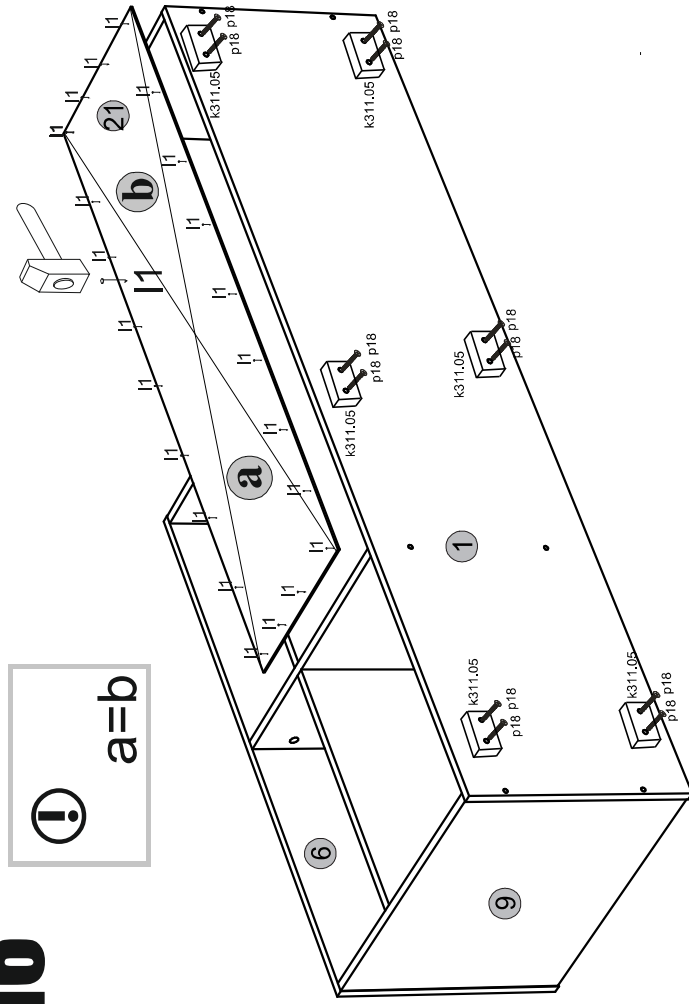 

13

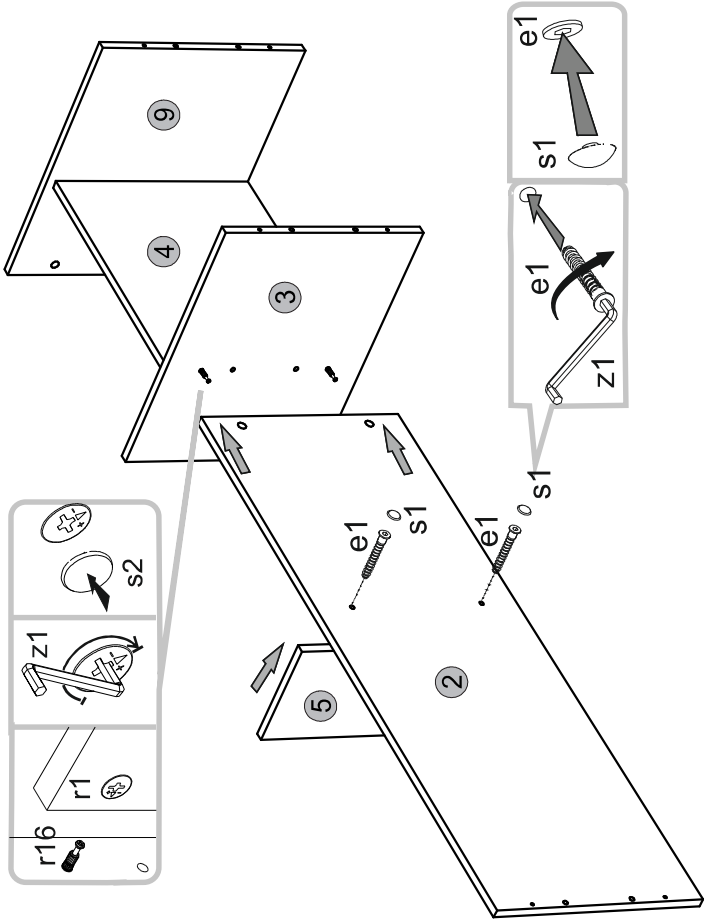 

14

